


PLATE EM

Emergency Door Release with Magnetic Reset

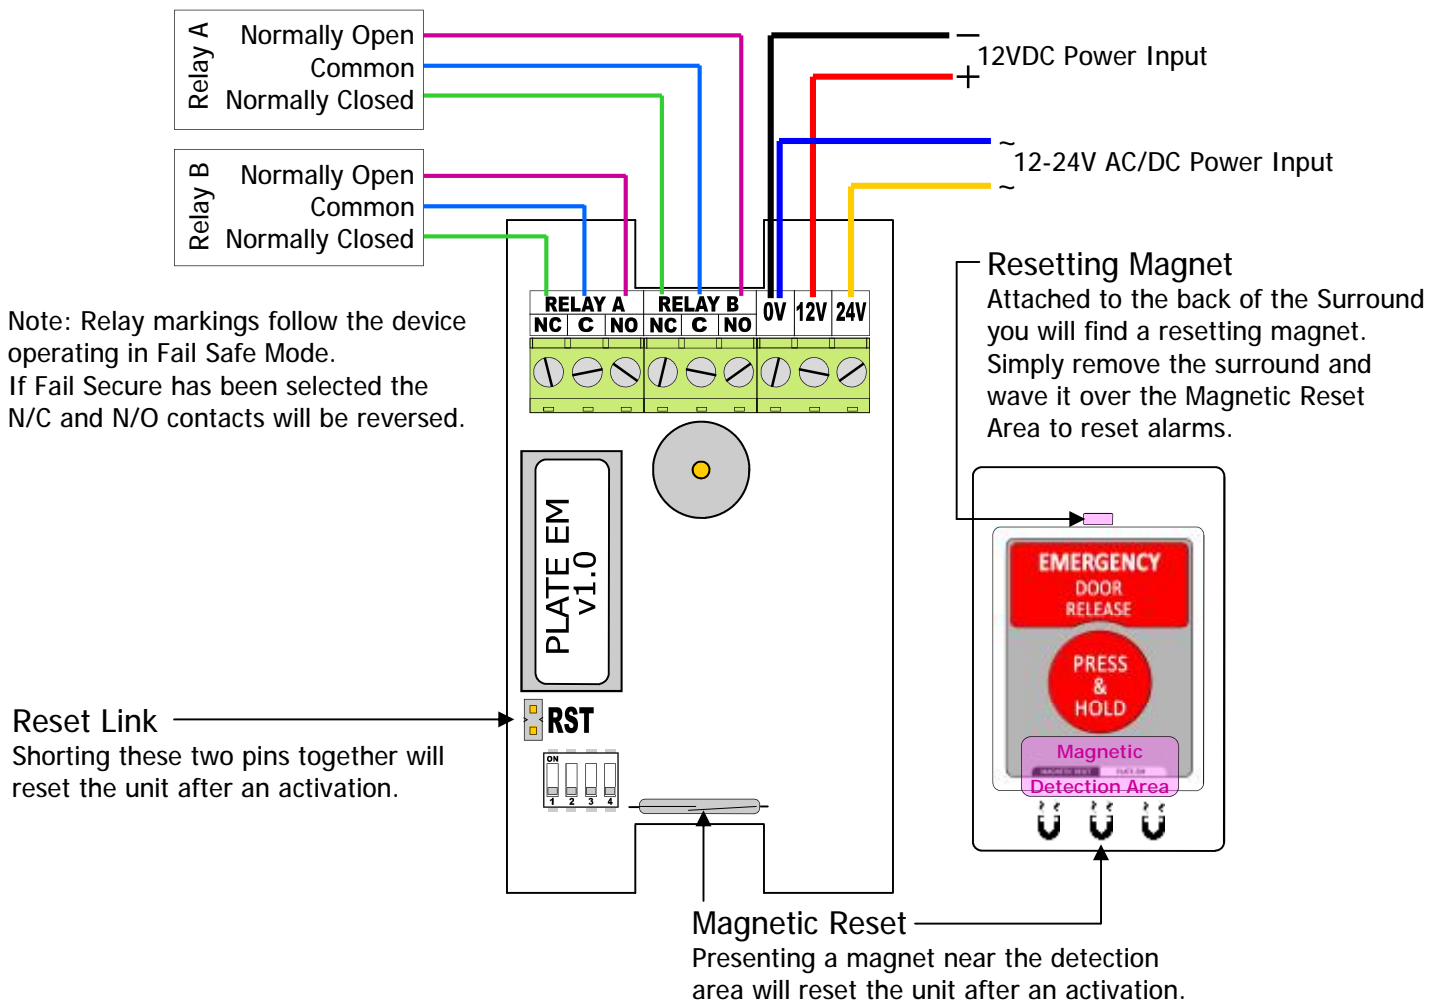

Dipswitch Positions		
	1 + 2 OFF	Continuous Buzzer When activated the buzzer will sound until reset
	1 ON, 2 OFF	Auto Resetting Buzzer When activated the buzzer will for 5 seconds only
	1 OFF, 2 ON	Pulsed Buzzer When activated the buzzer pulse until reset
	1 + 2 ON	Buzzer is Disabled No sound
	3 OFF	0.5 second delay Activation requires hand present for 0.5 seconds
	3 ON	1.0 second delay Activation requires hand present for 1 second
	4 OFF	Fail Safe When power is dropped off, relay will activate
	4 ON	Fail Secure Relay not affected if power is dropped off <i>Note. Relay markings will be reversed</i>

Calibration:
When the device is powered up it will automatically adjust to its environment, this may take up to 20 seconds. So for best results, fit the Plate to the wall before applying power.



Specifications:

Voltage
12V Input: 10-15V DC only
24V Input: 12-24V AC or DC

Current Max.
50mA Standby (Fail Safe Mode)
15mA Activation (Fail Safe Mode)
15mA Standby (Fail Secure)
50mA Activation (Fail Secure)

Relay Contacts
Relay A: 5A, 30VDC
Relay B: 5A, 30VDC

Wiring Example

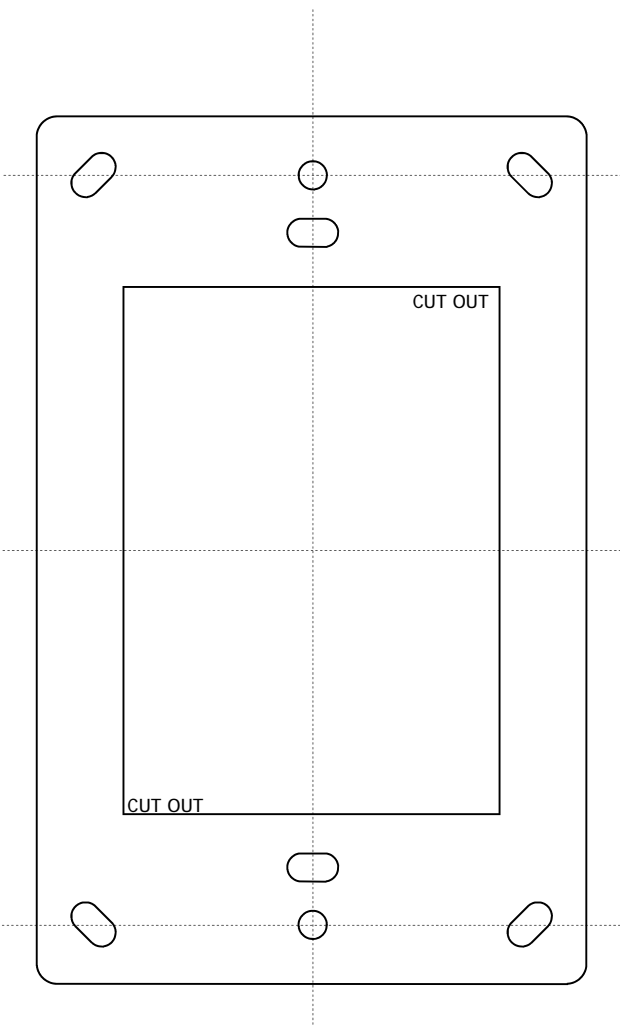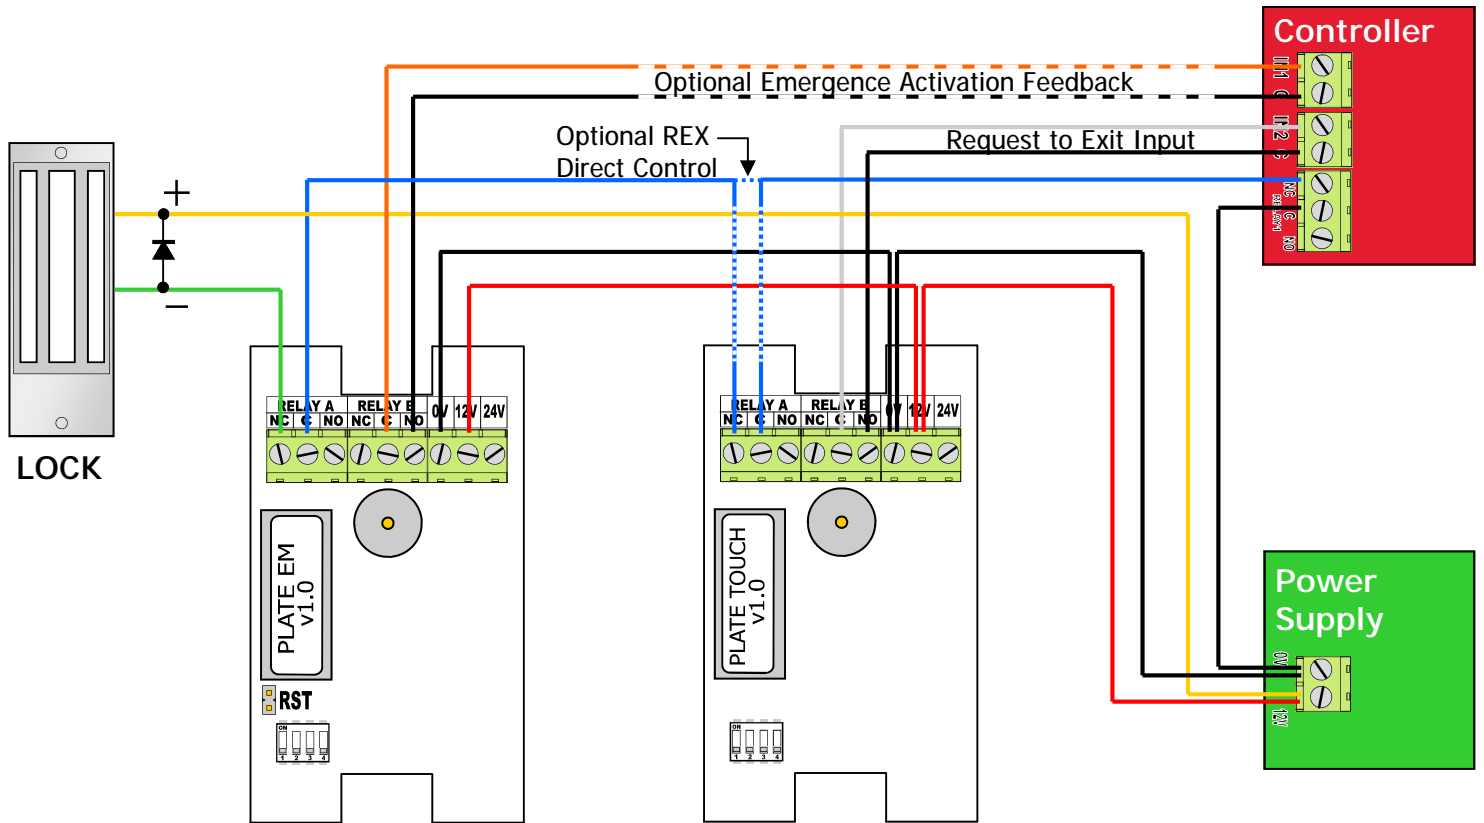

ARROWHEAD ALARM PRODUCTS Ltd.
 344b Rosedale Rd,
 Albany,
 Auckland.
 Ph. 09 414 0085
 Fax. 09 414 0088
www.aap.co.nz
 v1.0

