




# AAP APP INITIAL SETUP

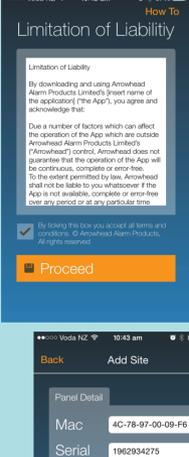

Open the App  
After reading the Disclaimer  
Tick the box  
Then press Proceed.

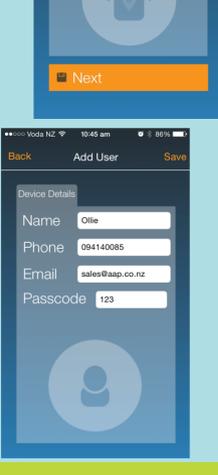

Now put in the Mac address and Serial Number supplied with the System.

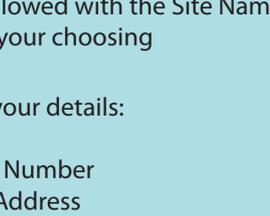

(ask your installer for these)

**Note: MAC Address Must be in UpperCase**

Followed with the Site Name of your choosing



Enter your details:  
Name  
Phone Number  
Email Address  
Under Passcode please put in your personal alarm pin code (this will allow one press arm feature to work)  
Then press Save


## CUSTOMISING



From the Home Screen press System




Choose from the list what areas you wish to customise

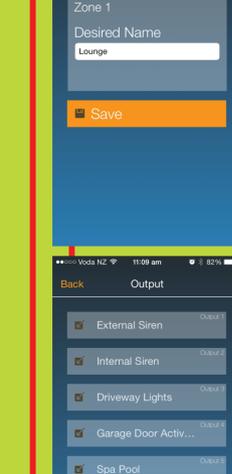

Touch on a Zone or Output box to change detector and device names



Type in your desired name Keeping it less than 26 characters will ensure the hole name is displayed  
Touch Save when finished

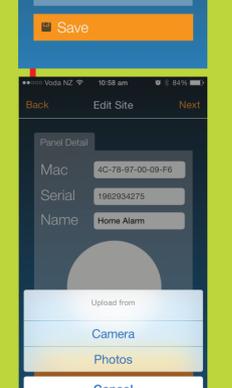

Go through and fill in all Zone and Output names




Selecting Edit Site allows you to change your Systems Name  
Also by pressing in the middle of the circle you can choose a Site Photo




You can choose to take a photo by pressing Camera  
or press Photos to select a photo from your existing images




Select a Photo

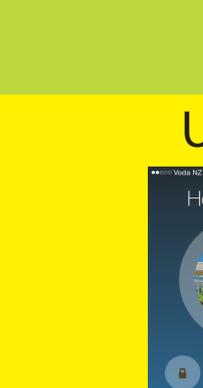

If you are happy with the Photo press Save  
or touch the image and choose another

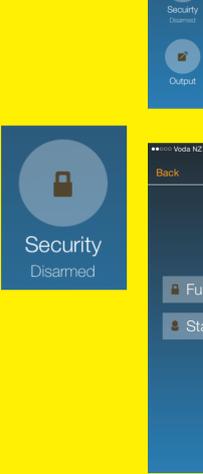


If you have more systems you wish to monitor and control touch on the Site Image from the home screen

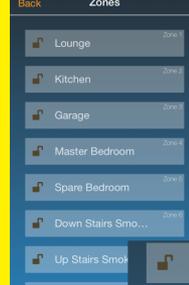


Current Sites will show in the list

To Create a new Site touch Add New Site  
Then follow the setup steps for your new system.

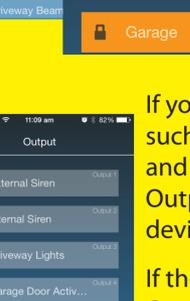


Once setup in completed your new Site should appear in the list  
You can now touch on the site you wish to view and control


## USING THE APP

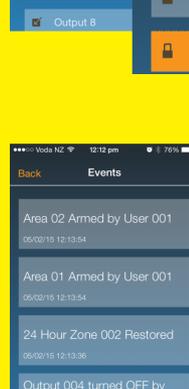



Starting from your Sites Home page

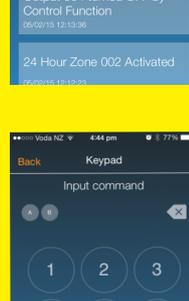

Touching the Security Icon will bring up Quick Arm  
Here with a single touch you can Fully Arm, Disarm & Partly Arm your system (please talk to your installer about the Stay-In Arm Feature)

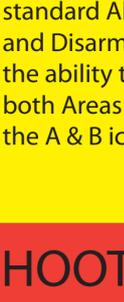

If your System is Armed the Security Icon will turn Red

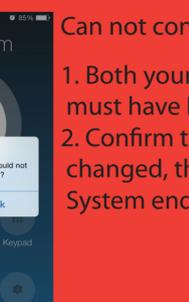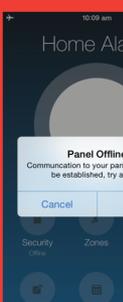



If you wish to disable a Zone touch on the Zone Icon then select the zone/s you to be disabled  
They will then light up orange

The System can now be armed with selected zones ignored




If you wish to control devices such as garage doors, heaters and lighting touch on the Output Icon, then select the device you wish to On or Off

If the device is On it will light up Orange (please talk to your installer about enable and configure this feature)

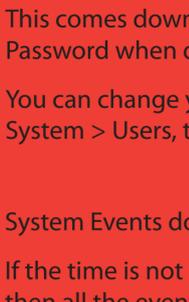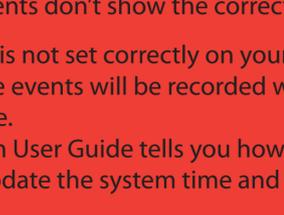

Touching the Event Icon will send a request to download the last 16 events stored in the systems memory.  
This may take upto 30seconds  
The list will display newest to oldest order.

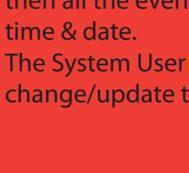

Touching the Keypad Icon will take you to a virtual keypad terminal.  
Here you can type in your standard Alarm codes to Arm and Disarm the System with the ability to Set either or both Areas (represented by the A & B icons, Red = Armed)

## TROUBLE SHOOTING



Can not connect to your System?  
1. Both your Smartphone and Alarm System must have Internet access.  
2. Confirm the Site Serial number has not be changed, this can be changed from the System end to stop old users having access.



Can not control Output devices?  
if touching on the Output device turns it Purple but not to Orange, then your system has not been configure for Output Control. Please contact your alarm technician to enable this feature



Can not Arm or Disarm using the Security Icon?  
This comes down to not having entered a valid Password when doing the Intial setup.  
You can change your Password by going to System > Users, then choose your profile.



System Events don't show the correct time and date?  
If the time is not set correctly on your Alarm System then all the events will be recorded with the wrong time & date.  
The System User Guide tells you how to change/update the system time and date.