

AAP-REMOTE Manual v1.0

Hush & test remote control for AAP-SMOKE & AAP-HEAT - 433MHz



Specifications

Voltage	12VDC Battery (Part#23A)
Battery	Included
Function	Remote hush & test button
Frequency	433MHz
Enclosure	Indoor Use Only
Mounting	Wall mount bracket
Dimensions	112 x 40 x 19mm (incl wall mount bracket)

Hush Button

The hush function on the remote (or any connected devices) only works when the system has been activated from a real fire or heat source. **DO NOT** attempt to hush the detectors when the system is under test.

Test Button


Press the test function on the remote or any of the interconnected devices & the system will sound for roughly 15 seconds. **DO NOT** press any other remote or detector buttons until the beeps from all detectors have silenced.

Overview

The 'AAP-REMOTE' directly interconnects with the 'AAP-SMOKE' & 'AAP-HEAT' fire detectors.

This allows users to test or hush the fire detection system from a central & easy to access location.

Smoke & heat detectors should be tested once every week, making the 'AAP-REMOTE' a valuable tool for large systems or detectors that are difficult to access.

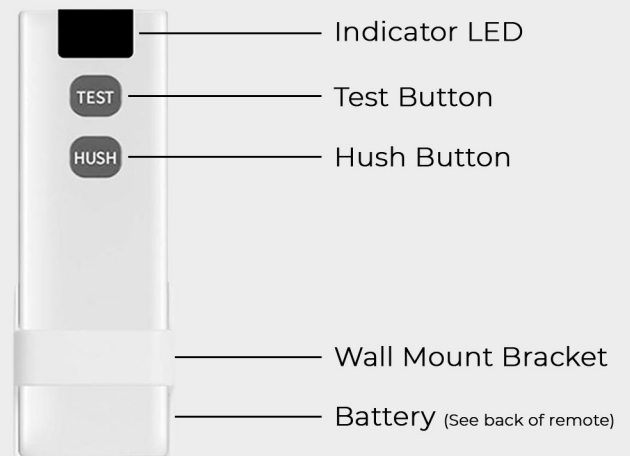

Learn Procedure

1. Pair all 'AAP-SMOKE' & 'AAP-HEAT' detectors as detailed in their respective product manuals.
2. Press & hold the 'Primary' 'AAP-SMOKE' or 'AAP-HEAT' detector button until the green LED flashes 3 times & then release (the red LED on the detector will begin to fast flash for 1 minute while waiting to learn a new device).
3. Press & hold the 'TEST' button on the remote you wish to pair until the red LED flashes 2 times & then release. The red LED will fast flash once and then slow flash 3 times to indicate a successful learn.

Defaulting Procedure

1. Press & hold the 'TEST' button until the red LED flashes 4 times & then release. The red LED will flash 4 times slowly to indicate a successful default.