


TVT-B2.8POE-WiFi

Wireless IPC



Connecting the camera to WiFi:

1. Use a network cable to connect the camera to your laptop or PC. Make sure to run 12VDC to the camera.
2. Run IP-Tool* on your PC, to find the IP address of the camera. The default IP address of this camera is 192.168.226.201. Double click it. This will bring you to the login interface of the camera. Enter the username and password to login. (username admin password 123456)
3. Once logged in, click Config>Network>WIFI to go to the following interface. Enable WI-FI. Select the desired Wifi network name and password.

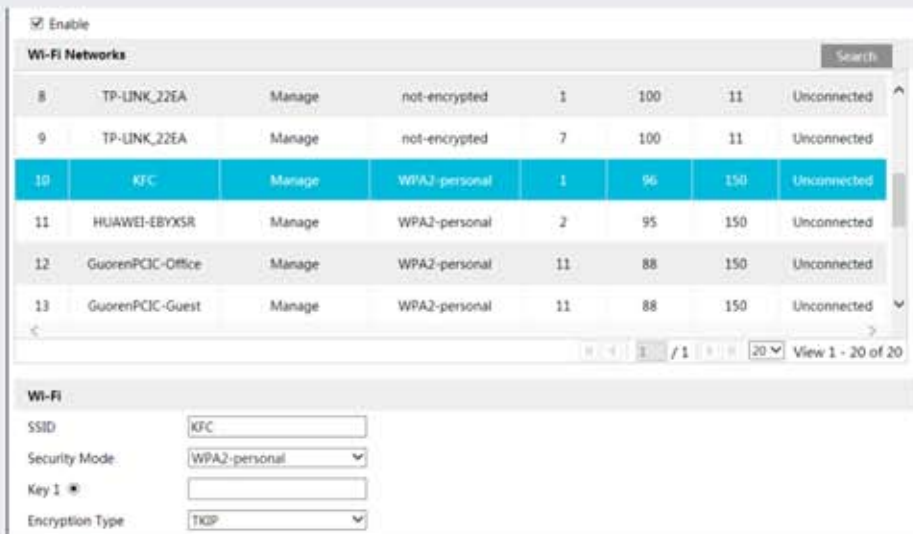

4. Once configured remove the power from the camera and install in the location of your choice insuring you have a good wifi signal. The camera will power up and automatically rejoin the network via wifi.
- 5a. Once connected go to your recorder go to Settings>Camera>Add. Add the wifi camera as you would a network camera.
- 5b. For standalone use without a recorder use IP-Tool to find the IP address again and view the camera via the web-interface.

*IP-Tool can be found on our website ready for download.