 


RX-CHIME CONNECTION DIAGRAM

 
EXPANSION OPTION: 1
EXTERNAL CHIME.



JUMPER SETTINGS: 1



J16 CONTROLS THE
INTERNAL BUZZER.




JUMPER ON = BUZZER ON

EXPANSION OPTION: 2
GARAGE DOOR CONTROL.




 
JUMPER SETTINGS: 2



J16 MUST BE OFF
IF J15 IS OFF



JUMPER OFF = BUZZER OFF

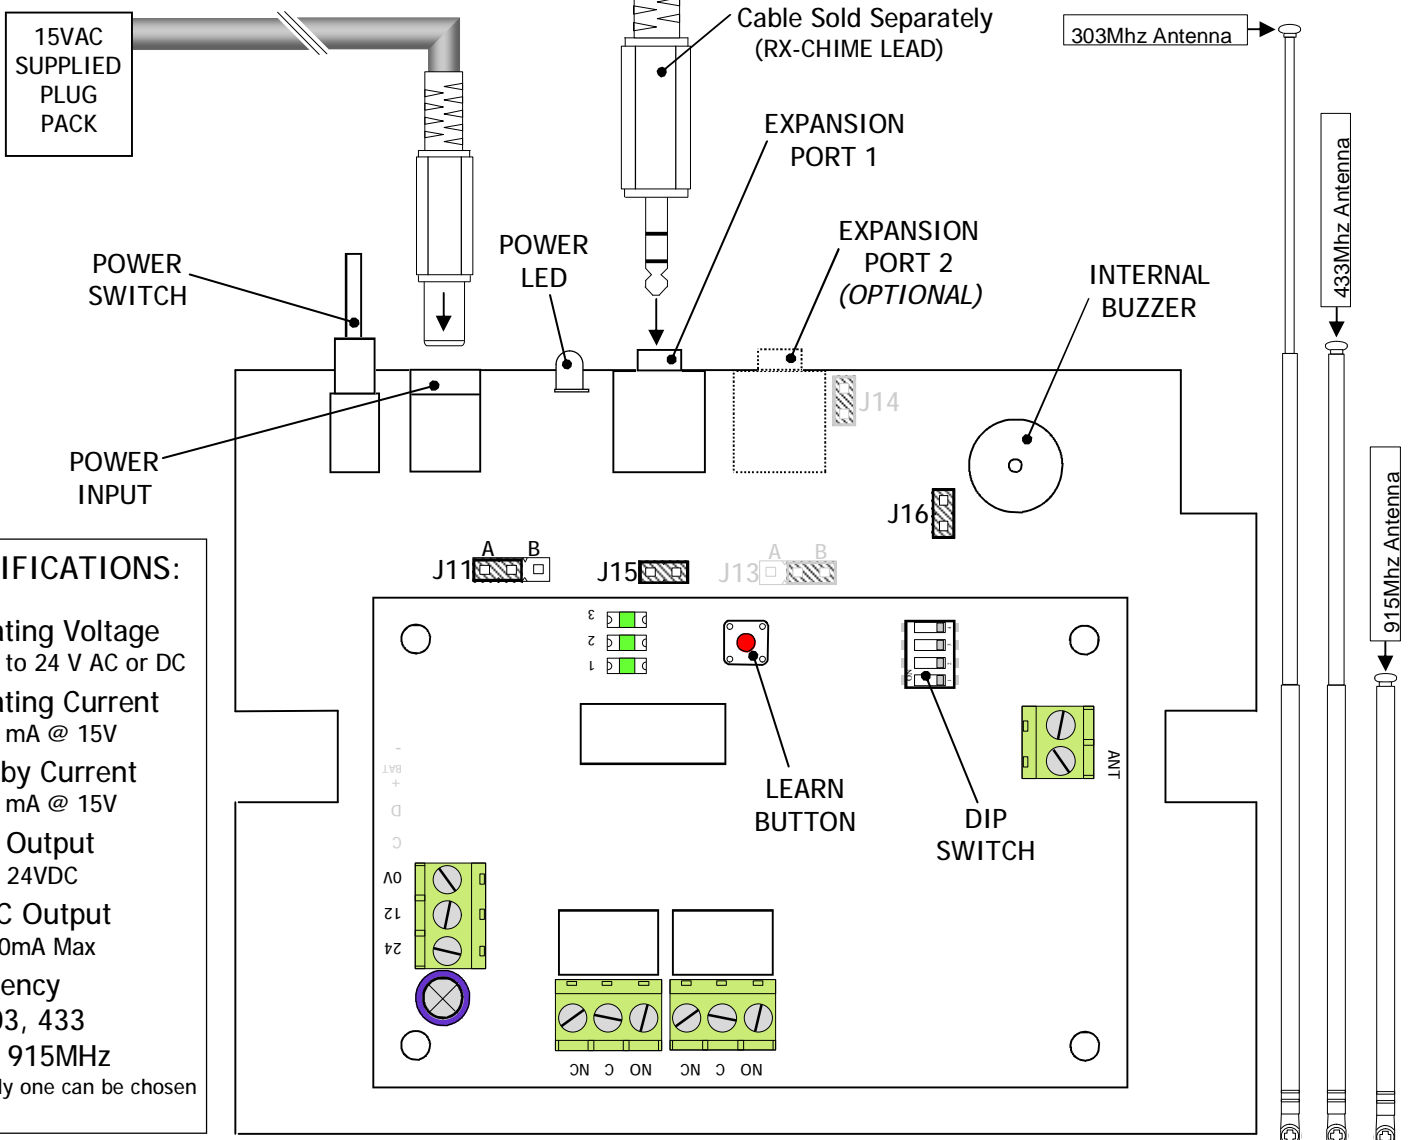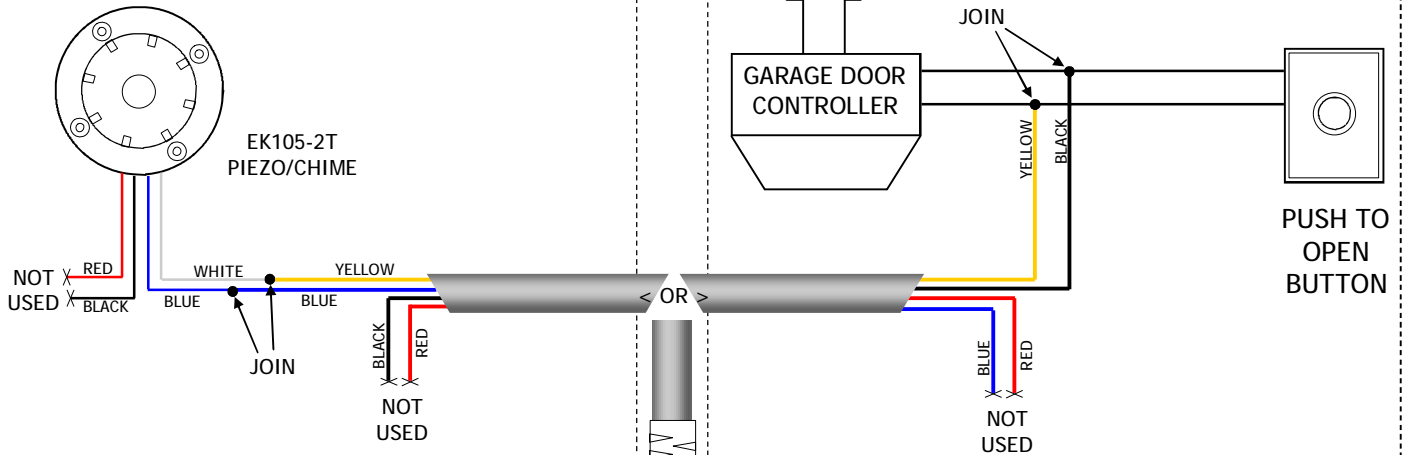




SPECIFICATIONS:

- Operating Voltage: 12 to 24 V AC or DC
- Operating Current: 80 mA @ 15V
- Standby Current: 50 mA @ 15V
- Relay Output: 1A 24VDC
- 12VDC Output: 100mA Max
- Frequency: 303, 433 or 915MHz
Only one can be chosen

RX-CHIME PROGRAMMING

STEP 1: SET DIP SWITCHES

   Choose the frequency you wish the RX-CHIME to receive.




STEP 2: POWER ON

Flick the power switch On, the green Power LED should light up.

STEP 3: LEARN MODE

 Press the small red Learn Button once. LED 1 should start flashing.




STEP 4: TRANSMIT

When LED's 2 & 3 start flashing, trigger the transmitter you wish to learn.

If successful LED's 2 & 3 will stop flashing.

 
Note: learn mode will time out after 15 seconds, turning LED's off automatically.



* If you have finished loading transmitters please go to STEP 7

STEP 5: LEARN NEXT TRANSMITTER

 
Press the small red Learn Button once again. LED 1 should start flashing.



STEP 6: TRANSMIT

When LED's 2 & 3 start flashing, trigger the next transmitter you wish to learn.

 If successful LED's 2 & 3 will stop flashing.



* If you wish to load more transmitters, please repeat STEP's 5 & 6 again.

STEP 7: FINISHED LEARNING

Once all transmitters have been learnt in, please turn the power switch Off.

STEP 8: POWER ON

Flick the power switch On, the green Power LED should light up.

STEP 9: TEST

With jumpers set to option 1 and J16 ON, activate a learnt in transmitter, the internal buzzer should then sound.

TROUBLE SHOOTING

Not Learning:

When learning a transmitter, if LED's 2 & 3 are not turning off when you cause a transmission, please turn the power off and check the dip switch settings.

If you are still having trouble, set the dip switches to a different frequency and power off and on again.

Buzzer is not working:

First check the jumpers, to make the buzzer work J15 and J16 should both be on.

When the transmitter is activated does LED 1 come On?

Yes, the transmitter might not been loaded properly. Please try learning again. *note¹*

No, either the transmitter is not transmitting properly, or the dip switches are set wrong. *note²*

 
Poor Range:

Make sure the Antenna length is set to the correct length, follow diagram on other page.

note¹ = if you start the learning from the beginning, existing transmitters will be over written.

note² = the RX-CHIME can only receive 1 set frequency, if you have 2 different frequency transmitters, only 1 can work.

OTHER DIP SWITCH OPTIONS:



ARROWHEAD ALARM PRODUCTS Ltd.

344b Rosedale Rd,
Albany,
Auckland.
Ph. 09 414 0085
Fax. 09 414 0088
www.aap.co.nz
v1.0

