

infinity link


Wireless Transceiver for ESL & ESX



Specifications

Protocol	infinity 2 Way Encrypted
Wireless Range	Up to 500m Line of Sight
Frequency	915MHz
Modulation Type	GFSK
Control Panel Support	ESL, ESL-2, ESX & Runner
Voltage	10 to 15VDC
Current	40mA
Operating Temperature	-20°C to 50°C
Environment Humidity	85% max
Dimensions	L90 x W52 x H18mm
Weight incl Battery	40g
Max Supported Devices	16 x Inputs, 2 x Sirens & 20 x Remotes

Overview

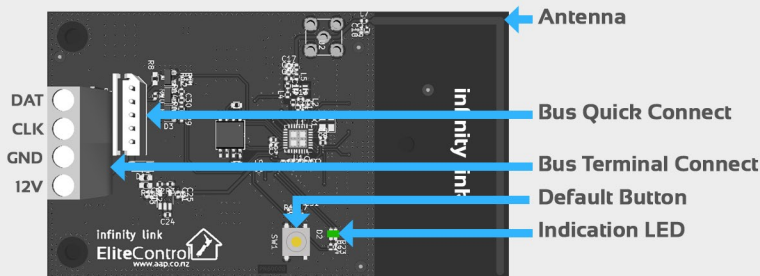

Indication LED

The indication LED will illuminate **green** when receiving a wireless signal & also flash during system learn beeps

Default Programming

If the 'infinity link' has previously been paired with wireless products it may require defaulting. To do so, press and hold the gold 'Default' button while powering up the unit & continue to hold.

The LED will display **solid red** and **turn green** when default is successful

Warning: Defaulting the infinity link will lose connection with any/all previously paired products

Compatible Products



Mounting Locations

- Do not mount in close proximity to concrete, steel or ferromagnetic materials
- Exterior installations require an IP65 enclosure
- Mount as close to wireless devices as possible & with zero or minimal obstructions
- Transmitting through dense material such as concrete, steel or similar is not recommended
- Use dedicated slot (shown here) when mounted inside the EC-CAB polycarbonate enclosure

