

Elite S Upload/Download over IP

To use this software to remotely connect to an Elite S/S-Lite, you must have:

- 1 x Elite-S or Elite-S-Lite
 - 1 x IP-Module
 - 1 x IP-Loom (connecting the IP-Module to the Elite-S)
 - 1 x PC or Laptop running Windows 98, XP, Vista or 7
 - 1 x 3rd Party Router
 - 1 x 3rd Party IT technician to setup the Router
(the IP-Control.pdf paperwork will help the IT technician do this)
- AAP will not be able to help you configure any 3rd party hardware.

Install the software package by double clicking on:
ULD16 Setup.exe


Choose the **No-Questions-Asked** Installation option.

The auto install program will then put an icon on your desktop called:
uld16

It is recommended to change the name of the icon to Elite S



If you are using Windows 7 the ULD software must be run in Compatibility mode.
step 1. right click on the uld16 Icon.
step 2. click on Properties

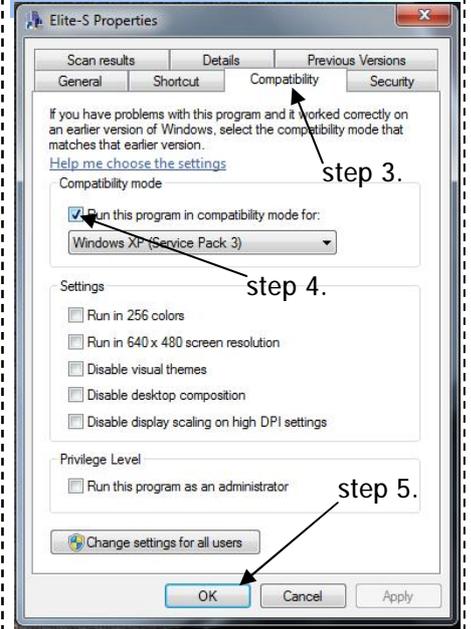

Double click on the icon to open the program.

The Login Name is: ELITES
The Password is: ELITES


When the program is open go to:
Communications
Source
Then choose TCP/IP (WinSock)



Put the panel Address in here
i.e. 192.168.1.100 (default)
i.e. alarm.dyndns.org (Dyn DNS account)

You will also need to put in the ULD PORT S
(5001 is the default)

Now you should be able to
Connect to the panel.

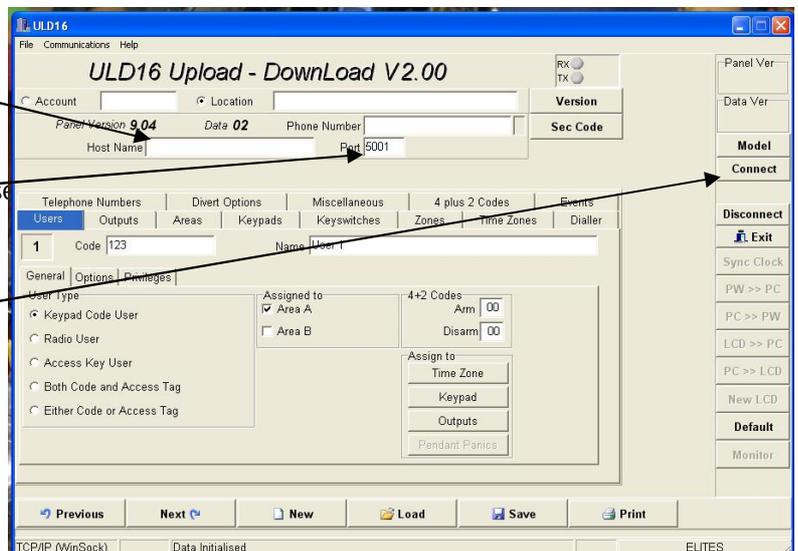

ARROWHEAD
ALARM PRODUCTS Ltd.
344b Rosedale Rd,
Albany,
Auckland.
Ph. 09 414 0085
www.aap.co.nz
v1.0



Arrowhead Alarm Products Ltd