

# USB D-LINK

The USB D-Link is a specialised Arrowhead Alarm Products USB to Serial connection cable. It allows AAP software to communicate with AAP hardware.

## Compatible Hardware:

ESL/Elite-S/Elite-S Lite/Runner  
Elite 16D v6/PW-16  
Elite 8D/Alert 8D/PW8/Elite-Lite  
Elite 64/PW64  
AC2W  
IP-Module/3G-IP-Module

## Compatible Operating Systems:

Windows 2000, XP, 7, 8 and 10 (drivers must be installed)

## Setup and Installation:

1. go to ([www.aap.co.nz/usb](http://www.aap.co.nz/usb)) and download the USB D-Link Driver
2. Choose the Driver to match your operating system/CPU type and run the .exe file.
3. When installation is complete, plug the USB D-Link into one of your PC's USB ports.
4. Now Install the software for the product you wish to connect to. Download the software from ([www.aap.co.nz/usb](http://www.aap.co.nz/usb))
5. Once software is installed, go to ([setup/communication/source](#)) and choose the (Direct via COM?) That has been assigned.

ARROWHEAD ALARM PRODUCTS Ltd  
344b Rosedale Rd,  
Albany,  
Auckland.  
Ph. 09 414 0085  
Fax. 09 414 0088  
[www.aap.co.nz](http://www.aap.co.nz)  
v1.0

