


RX-16 MF4

433MHz

Multi Function 433MHz Elite Control Receiver

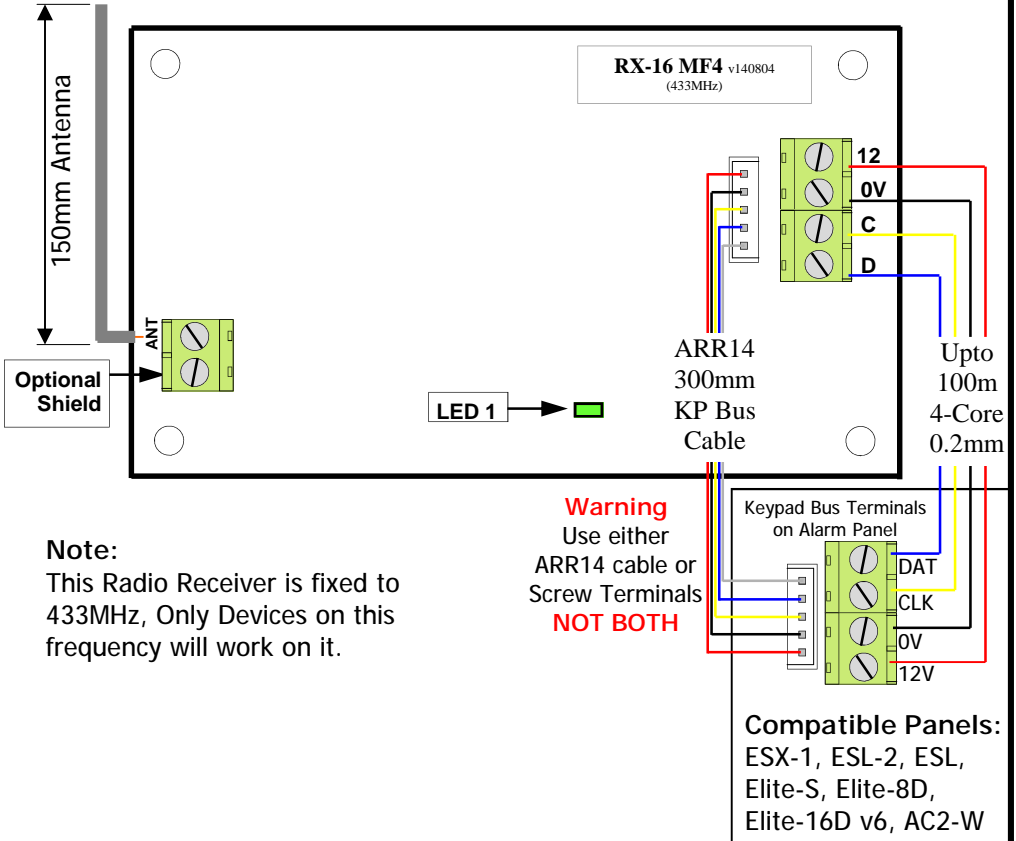

Compatible Radio Devices: 433MHz



DFW-433



SX-TR04/433



RM-0001A



HM-FW-433



JN-DCA



RX-16 MF4 (Programming)

ESL-2 Programming option.

To do this Programming you must be in Installer Programming Mode.

Pendant 0

P 18 E 40 E E (Press button you want to **Arm**)

P 18 E 50 E E (Press button you want to **Disarm**)

P 18 E 60 E E (Press button you want to **Trigger Output 3**)

P 18 E 70 E E (Press button you want to **Trigger Output 4**)

Pendant 1

P 18 E 41 E E (Press button you want to **Arm**)

P 18 E 51 E E (Press button you want to **Disarm**)

P 18 E 61 E E (Press button you want to **Trigger Output 3**)

P 18 E 71 E E (Press button you want to **Trigger Output 4**)

Pendant 3

P 18 E 43 E E (Press button you want to **Arm**)

P 18 E 53 E E (Press button you want to **Disarm**)

P 18 E 63 E E (Press button you want to **Trigger Output 3**)

P 18 E 73 E E (Press button you want to **Trigger Output 4**)

Pendant 4

P 18 E 44 E E (Press button you want to **Arm**)

P 18 E 54 E E (Press button you want to **Disarm**)

P 18 E 64 E E (Press button you want to **Trigger Output 3**)

P 18 E 74 E E (Press button you want to **Trigger Output 4**)

Wireless Detector Zone 9

P 164 E 9 E E (trigger the device you want to learn in)

P 122 E 9 E *turn ON options 1 & 5* (sets zone to wireless zone)

Wireless Detector Zone 10

P 164 E 10 E E (trigger the device you want to learn in)

P 122 E 10 E *turn ON options 1 & 5 E* (sets zone to wireless zone)



ESL-2

For other programming options please
read the Full installation manual

← Quick-Links →
To Full Installation Manuals



ESX-1